

# MaNima Module

*An Industrial Quality PWM and LED monitoring module*



## MaNima Pollux Manual

### Sensor Inputs

Measurements are possible with multiple sensor inputs. These readings can then be used for monitoring and conditions.

### Ethernet switch

The MaNima Pollux doubles as an ethernet switch. The two ethernet ports on the Pollux are of the same network.

### Digital/Potential inputs

There are 2 Digital/Potential inputs available on the MaNima Pollux. These can be used as triggers for actions.

### PWM output

There are 8 PWM outputs available on the MaNima Pollux. These can be used to controller analogue LEDs or devices. PWM signal frequency is set at 340Hz.

### Redundant setup

If the Pollux is used in an important installation that can't have malfunctions, it is possible to have a 2<sup>nd</sup> power source for the Pollux to ensure system reliability.

### Monitoring and the cloud

The Pollux has been made with monitoring in mind. It is also possible to send this data to a cloud database.

### Custom Software

The MaNima Pollux can be customized to communicate with your specific system. Contact MaNima Technologies for more information.

### Easy-to-use GUI

The settings of the Pollux can easily be configured with the MaNima Configurator.

### Increased reliability and protection

The MaNima Pollux is able to measure the Current and Voltage going through the PWM outputs.



# Table of Contents

<b>Table of Contents</b> .....	2
<b>Foreword</b> .....	3
<b>Safety Instructions</b> .....	4
<b>Technical Specifications</b> .....	5
<b>The MaNima Configurator</b> .....	6
<b>Opening the MC</b> .....	7
<b>The UI (User Interface)</b> .....	8
<b>Scanner</b> .....	9
<b>Network Configurator</b> .....	11
<b>LED Output</b> .....	12
<b>Pulse mode*</b> .....	13
<b>Current</b> .....	14
<b>NTC / LDR</b> .....	15
<b>I / O</b> .....	16
<b>Boot scene</b> .....	17
<b>Time Schedule*</b> .....	18
<b>Action handler</b> .....	20
<b>Action Handler Examples</b> .....	23
<b>Update</b> .....	26
<b>Installation &amp; Wiring</b> .....	27
<b>Port Descriptions</b> .....	28
<b>Redundant Power Supply</b> .....	29
<b>Digital and Analog In/outputs</b> .....	30
<b>PWM Outputs</b> .....	31
<b>Reset &amp; Indications</b> .....	32
<b>Recording and Playing</b> .....	33
<b>Action Handler procedure</b> .....	34
<b>On-Board Temperatures</b> .....	35
<b>YouTube Tutorials</b> .....	37
<b>Contact Info</b> .....	38

\*Requires Industry Licence



## Foreword

First of all, thank you for using the MaNima Pollux!

This manual has been made for the MaNima Pollux. It is important that anyone, who has to work with the MaNima Pollux, has read this manual.

Some features in this manual may require a MaNima Pollux Industry licence, and will not be accessible with the base Pollux licence. Industrial Features are marked with '\*' or as shown in the technical specifications.

MaNima Technologies



## Safety Instructions

To make sure the product is properly handled, these precautions and safety instructions must be followed:

- Read the entire manual before installing the MaNima Pollux.
- These instructions should be handed out to the technicians/end-users responsible for installing and/or operating this product.
- The installations of this product should only be carried out by certified personal.
- Do not repair this device. Any unapproved modifications or reparations conducted by anyone other than MaNima Technologies B.V., will void product warranty.
- Do not connect the wiring to this product in any other manner than described in this manual.
- Never use this product when it is damaged, has visible damage, does not work correctly or when the product shows any other questionable behaviour that is out of the ordinary with electrical devices.
- Make sure the power source has no short-circuit.
- Make sure the input voltage is between 12-48VDC when power is turned on. Higher voltages might damage the product.
- Do not use more than one power source for the MaNima Pollux.
- To turn-off the MaNima Pollux, it must be disconnected from the power source.
- The MaNima Pollux must be protected against wet environments. Any moist will damage the product.



# Technical Specifications

Pollux model		MaNima Pollux	MaNima Pollux 30kHz	MaNima Pollux Industry
General	Weight	360 gram		
	Dimensions	90 x 159 x 58 (B x L x H)		
	Mounting	DIN Rail 35mm		
	IP class	IP10		
	Storage temperature	10°C ~ 60°C		
	Operating temperature	10°C ~ 40°C		
	Warranty	5 Years		
	Directives	CE, RoHs		
Input	Wiring	Max 1.5mm <sup>2</sup>   14 AWG		
	Own Power Consumption	1,5W		
	Efficiency	Approx. 99,8%		
	Input voltage DC1	12-48VDC		
	Input voltage DC2	12-48VDC		
	Input current DC1	20A	10A	20A
	Input current DC2	20A	10A	20A
	Ethernet	Ethernet switch terminal connector: RJ45 bus, 2 x 9 pins terminal block		
	NTC / LDR	8		
	Digital inputs	10		
	Min-Max NTC measurement	-25°C ~ 100°C, 0.1°C degree resolution and +/-10% accuracy		
Output	DC1 PWM-outputs	4 ch		
	DC2 PWM-outputs	4 ch		
	DC1 Max current output	5A per channel	2,5A per channel	5A per channel
	DC2 Max current output	5A per channel	2,5A per channel	5A per channel
	PWM Frequency	300Hz	30kHz	Stepless 200Hz to 30kHz
	Digital outputs	2		
Electronic Protection	Over voltage protection	Yes, up to 50 Volts		
	Short circuit protection	Fast short circuit protection on outputs and inputs (< 10µs response)		
	On-Board temperature protection	Turns off outputs when board is > 60°C.		
Pollux Features	MaNima Configurator	✓		✓
	Real-Time temperature monitoring	✓		✓
	Real-Time electronic monitoring	✓		✓
	Redundant switching inputs and outputs on error	✓		✓
	Adjust basic NTC / LDR settings	✓		✓
	Autonomous PWM Dimming	✓		✓
	Set action/failure handlers	✓		✓
	Set basic digital and analog contacts	✓		✓
Industrial Features	Remote control with MaNima Cloud	✗		✓
	Cloud Database	✗		✓
	Cloud Datalogging	✗		✓
	Cloud Back-up of configurations	✗		✓
	Cloud Feedback	✗		✓
	INP compatible	✗		✓
	UDP Compatible	✗		✓
	OTA software updates	✗		✓
	Adjust PWM-output	✗		✓
	Adjust PWM frequency	✗		✓
	Set advanced digital and analog contacts	✗		✓
	Set (astronomic) timetables	✗		✓
	Enable Pulse mode	✗		✓



# The MaNima Configurator

In this chapter there will be everything you need to know about The MaNima Configurator regarding the MaNima Pollux.

## The MaNima Configurator

The MC (MaNima Configurator) is the program used by the operator to configure the MaNima Pollux. The MC must be installed on a computer on the same network where the MaNima Pollux is connected to. To work with the MC it is recommended to first install and connect the MaNima Pollux to the network, since most (if not all) options won't be available without a connection between the computer and the MaNima Pollux.



# The MaNima Configurator - Opening the MC


The MaNima Configurator can be downloaded here:

[Downloads | MaNima Technologies \(manima-technologies.com\)](https://manima-technologies.com)

The MC is opened by adding the “GUI” file to the computer. In this file the user will find all of the files needed to use this program. You can place the “GUI” in any file, but for this manual, the file will be placed in the desktop.

The computer on which the MC will be installed on, needs the newest version of Java. Java can be downloaded on: <https://www.java.com/en/>

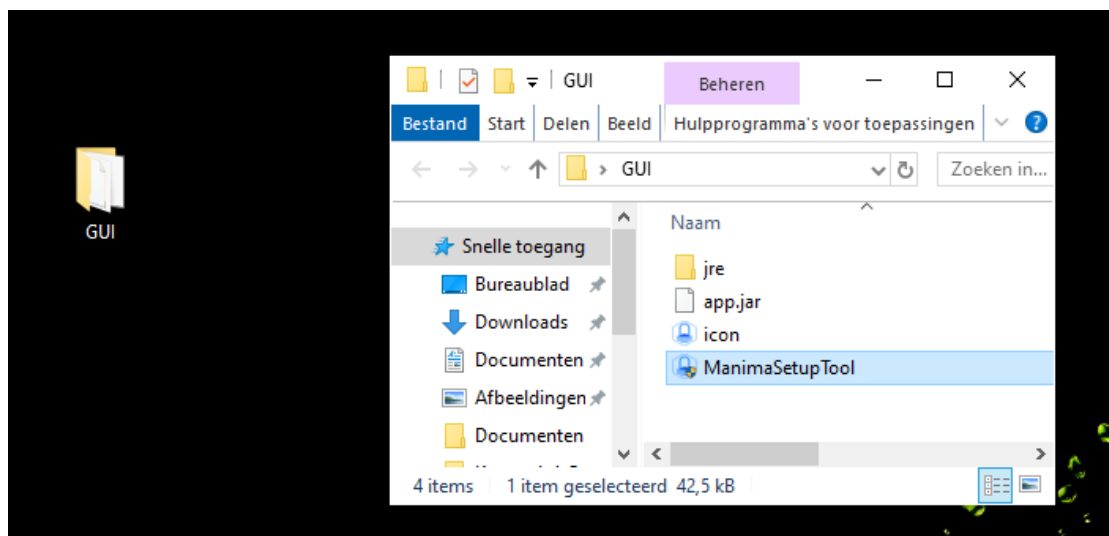

- **Open the file with the left mouse button and double click on “ManimaSetupTool” (Highlighted blue on the image below)**



- **To open the MC directly from your desktop, you can create a shortcut using the right mouse button on the “ManimaSetupTool” file.** The “ManimaSetupTool” can’t be placed outside the file, if done so, the MC will have an error.

# The MaNima Configurator- The UI (User Interface)

On the left side of The MC window there are multiple tabs which are used to configure the MaNima Pollux. A short explanation is given to each tab below:

 Scanner	→	The scanner is the tab where the user can find and select the different MaNima Products that are connected to the same network. This is also the homepage.
 Network	→	Network is the tab used to select DHCP and to configure IP-addresses manually.
 Led output	→	Led output is the tab used to configure each port of the MaNima Pollux. Universes can also be added, deleted and changed here for each port.
 Current	→	Monitor the Current of the PWM outputs here. Parameters can also be set here.
 NTC / LDR	→	The NTC / LDR tab is used to configure the NTC / LDR inputs and to read out the sensor data.
 I/O	→	I / O is the tab used to configure the In-and Outputs of the MaNima Pollux
 Scenes	→	Boot scene is used to create standalone static scenes.
 Time sch...	→	Set time-slots for action handlers to activate/ trigger.
 Users	→	Set default user privileges after interface has restarted.
 Update	→	The update tab is used to install new software versions of the MaNima Pollux.
 Settings	→	Here it is possible to change the name of the device and (factory) reset the Interface.
 About	→	By pressing about, the user can see which version of the MC is installed.





# The MaNima Configurator- Scanner

The Scanner is the tab used to search for all MaNima Products in a network. Follow the instructions below to configure your own device.

**Make sure your computer and MaNima Pollux are connected to the same Ethernet/Wi-Fi network! The Interface should be in the scanner no matter what IP-adress it has.**

Scanner					
Currently editing: ManimaInterface (192.168.1.185)					
Device name	IP Address	MAC	Version	Software Version	Identify
ManimaInterface	192.168.1.185	70:B3:D5:DD:90:30	Magnus 8	V 2.0.7	<input checked="" type="checkbox"/>
▶ ManimaInterface ▶	192.168.1.186	70:B3:D5:DD:90:22	Magnus 8	V 2.0.7	<input type="checkbox"/>

**Currently editing: 'name' ('IP-address')** = This shows which device is currently being edited.

**Device name** = Device name is the name given to a device. The user will know which device is which. You can change the device name in the "settings" tab

**IP Address** = The IP-address is the number given to a device. Using this address the user will know which device is which. An interface must have a unique IP-address. Double addresses will not be visible!

**MAC** = The MAC address is the name given to the MaNima LED Interface by the manufacturer. MAC addresses are, unlike IP addresses, never identical to each other.

**Version** = This shows the used licence in the MaNima LED Interface.

**Software Version** = This shows the software version of the connected MaNima LED Interface.

**Identify** = If identify is switched on you can see which LED is controlled by that device, as they will be performing an RGB(W) test cycle.

▶ = This icon shows which Interface is the master of a group that is playing a scene.

▶ = This icon shows that the Interface has extensions connected. Press the symbol to see which.

⋮ = Press this button to connect or disconnect an extension.

👤 = Press this button to log-in using your username and password.



To connect to The MaNima Pollux, Left click on the Interface. If the connection is successful, there should be “Currently editing: (IP-address)” instead of “Currently editing: None”.


### Failure to Connect

If the MC is unable to find the MaNima Pollux, there are multiple things that may have gone wrong. So, make sure the following are correct:


1. The Connected MaNima Pollux is connected to the same network as the computer.
2. The network has a DHCP.
3. The IP-address is in the IP-address range of The MC.
4. The MaNima Pollux is powered or has the correct voltage.

### Error Warning

The error warning is shown when the Interface has encountered a problem. In the example given here, the Interface has encountered a problem where there are too many universes in a port. This can be fixed by lowering the FPS in the live playing software.

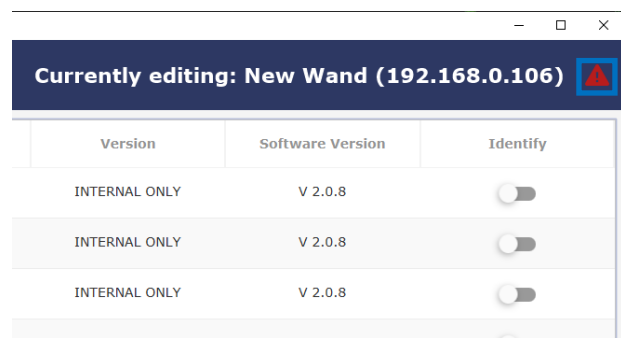

When such an error occurs, follow the instructions written in the error message.

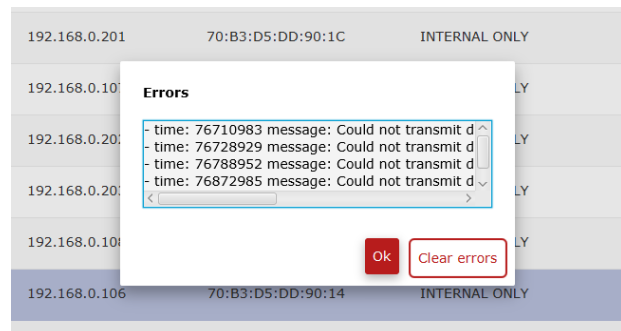

For more information see: [MaNima Tutorial - Connecting the Interface - YouTube](#)



# The MaNima Configurator - Network Configurator

The Network tab is used to edit the IP-address of the device. The IP-address can be edited manually by disabling the DHCP, or automatically by enabling the DHCP.

DHCP = turn off and on using the switch

Turning off DHCP enables the manual configuration of the network settings.

**Network**

DHCP ☐

Set IP address

192.168.1.185

Set subnet mask

255.255.255.0

Set gateway address

192.168.0.1

For more information see: [MaNima Tutorial - Connecting the Interface - YouTube](#)



# The MaNima Configurator – LED Output

The LED output tab is used to configure the PWM ports of the MaNima Pollux.

There are 8 available PWM ports on the MaNima Pollux that can assigned a specific universe or channel. These channels can then be controlled with ArtNet.

**Output enabled:** Enable the Output to change settings.

**Output universe:** This is the universe that is bound to the output.

**Output channel:** This is the channel that is bound to the output.

**PortNTC:** Select NTC's that should dim the Output.

**Powersupply voltage A:** Measured voltage input.

**OutputDutyPort:** Output Value from 0-255, that can be set in boot scene.

**PWM frequency:** The frequency of the PWM signal. The frequency can be adjusted.

PWM Output 1		PWM Output 2		PWM Output 3		PWM Output 4	
Parameter name	Value						
Output 2 enabled	<input checked="" type="checkbox"/>						
Output 2 universe	<input type="text" value="201"/>						
Output 2 channel	<input type="text" value="1"/>						
Port2NTC	NTC1	<input checked="" type="checkbox"/>					
	NTC2	<input type="checkbox"/>					
	NTC3	<input type="checkbox"/>					
	NTC4	<input type="checkbox"/>					
	NTC5	<input type="checkbox"/>					
	NTC6	<input type="checkbox"/>					
	NTC7	<input type="checkbox"/>					
	NTC8	<input type="checkbox"/>					
Powersupply voltage A	12.12 V						
OutputDutyPort2	255						
PWM Frequency side A	<input type="text" value="150.0"/>						Hz



## The MaNima Configurator – Pulse mode

Pulse mode is used to override the digital inputs 2 digital inputs. When pulse mode is activated the digital inputs will correspond to each PWM output (dig. Input 1 = PWM output 1 etc.).


**Enable pulsemode** = When enabled, all action handlers will be overridden by pulsemode. All inputs of digital inputs 2 will now control a PWM output.

**Delaytime port (...)** = set the delaytime for each situation.


**Pulse length port (...)** = set pulse length of PWM output when triggered.

Pulse mode	
Parameter name	Value
Enable pulsemode	<input checked="" type="checkbox"/>
Delaytime port 1	10 us
Pulse length port 1	10 ms
Delaytime port 2	10 us
Pulse length port 2	1 ms
Delaytime port 3	10 us

Digital input 2 / Pulse mode connector:

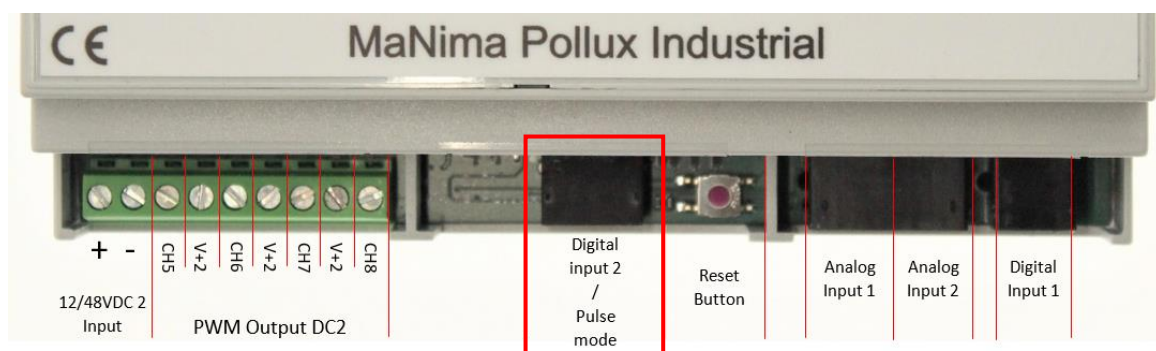

Connector pinout:

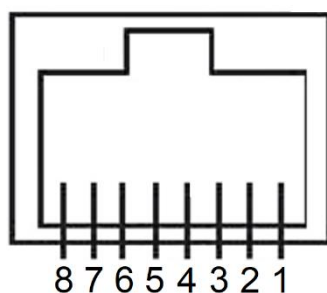

## The MaNima Configurator – Current

The Current tab enables the user to set parameters for each PWM Output.

**Port 1 Peak Current:** The measured peak current on the output.

**Port 1 Average Current:** The measured average current on the output

**High and Low setpoints:** These parameters are used with the ‘Set-up new handler’ button. Explanation can be found in the Set-up new handler chapter.

**Port 1 Short circuit:** When this box is checked there is a short circuit.

Current

Output 1
Output 2
Output 3
Output 4
Output 5
Output 6

Parameter name	Value
Port 1 Peak Current	1.32 A
Port 1 Average Current	1.32 A
Port 1 Peak current low setpoint	0.0 A
Port 1 Peak current high setpoint	10.0 A
Port 1 Average current low setpoint	0.0 A
Port 1 Average current high setpoint	10.0 A
Port 1 Short circuit	<input type="checkbox"/>

For more information see: [MaNima Tutorial - Current and Failure handlers - YouTube](#)



## The MaNima Configurator – NTC / LDR

The parameters tab is used to configure the NTC ports of the MaNima Pollux.

**Mode NTC/LDR:** Select whether you are using a NTC or a LDR.

**NTC/LDR Dim:** This is the current level of dimming ranging from 0.0 (low) to 1.0 (high).

**NTC1Temp:** This is the current temperature of the NTC.

**NTC/LDR 1 Disconnected dimming:** Enable to turn off paired PWM outputs when NTC/LDR 1 is disconnected or has loose/unreliable wiring.

**NTC1Outmax, NTC1Outmed and NTC1Outmin:** Explanations is shown in the graph below.


**NTC1Inmax, NTC1Inmed, NTC1Inmin:** Explanations is shown in the graph below.

**NTC1Beta, NTC1KOhm (password protected):** These values are the specifications of the connected NTC.

When setting the parameters, keep in mind the ambient temperature and generated temperature of the LEDs to reduce risk of damages. The temperature that can be measured by the MaNima Pollux is between -15 deg C and 90 deg C.

To connect a MaNima Magnus to a MaNima Pollux as an extension, read the MaNima Magnus manual for more information.

The parameters can be configured using this graph:

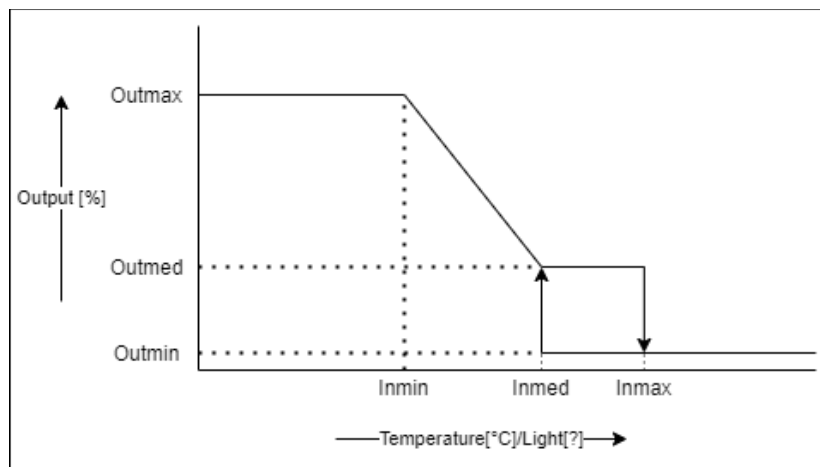

For more information see: [MaNima Tutorial - Configuring NTC inputs - YouTube](#)

Parameter name	Value
Mode NTC/LDR 1	NTC
NTC/LDR 1 Dim	0.0
NTC1Temp	36.35 deg C
NTC/LDR 1 Disconnect...	<input checked="" type="checkbox"/>
NTC1Outmax	100 %
NTC1Outmed	10 %
NTC1Outmin	0 %
NTC1Inmax	70.0 deg C
NTC1Inmed	60.0 deg C
NTC1Inmin	50.0 deg C
NTC1Beta	3900
NTC1KOhm	2200 Ohm

## The MaNima Configurator – I / O

Digital In-and Outputs can be used to set action handlers.

The Digital Inputs tab shows which Inputs are triggered by external systems.

Parameter name	Value	Remarks	Action handlers
Input 1-1	<input type="checkbox"/>		<a href="#">Set-up new handler</a>
Input 1-2	<input type="checkbox"/>		<a href="#">Set-up new handler</a>

Using the action handlers it is possible to set trigger requirements for each Input, as shown in the table below:

**Note:** When using digital inputs to trigger PWM outputs, fill in the Boot Scene for each output.

Trigger = Digital Input High		Digital Input	
Action		High	Low
If input = Low	Toggle Output	Toggle	No Toggle
	Turn on output	Output On	Output Off
	Turn off output	Output Off	Output On
	Redundant output	Switched	Not Switched
	Activate Scene	Activate	Deactivate
	Deactivate Scene	Deactivate	Nothing
	Switch on digital output	Switched	Not Switched
	Switch off digital output	Switched	Not Switched

In the DigitalOutputs tab it is possible to manually enable or disable the Digital outputs.

Parameter name	Value
Output 1	<input type="checkbox"/>
Output 2	<input type="checkbox"/>


For more information see: [MaNima Tutorial - Inputs and Outputs - YouTube](#)





## The MaNima Configurator – Boot scene

Boot scene is used to create standalone static scenes with the MaNima Pollux.

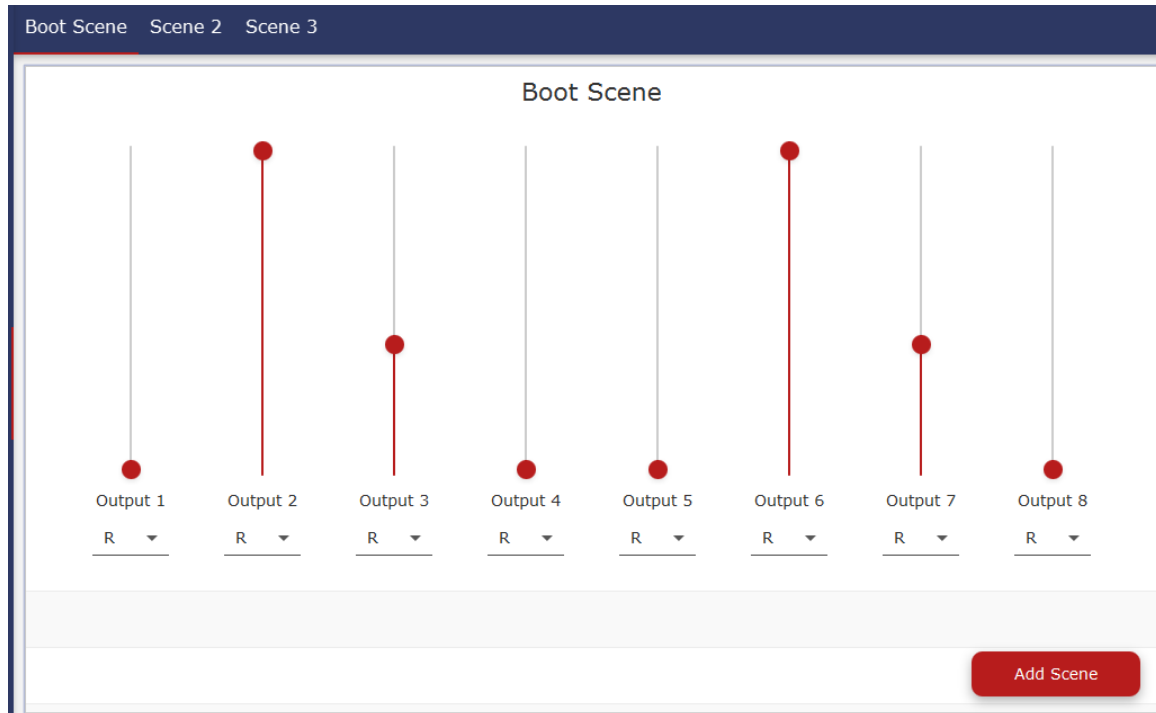

Use the sliders to adjust the output levels of each individual PWM port.

It is possible to set the colour of each individual port with the dropdown menu. This is useful as a reminder, which port controls which colour.

To add a scene that can be activated with handlers, press 'Add Scene' in the bottom right corner. The new scenes are added in the Tabs in the top left corner, and can be adjusted.

**Note:** Boot scene cannot be used when ArtNet is being transmitted to the MaNima Pollux to control the PWM ports.

**Note:** When using digital inputs to trigger PWM outputs, fill in the Boot Scene for each output.



# The MaNima Configurator – Time Schedule

The Time Schedule can be used to add action handlers to specific times of the day, specific weekdays or individual dates.

 
**An internet connection is required to use time schedules, make sure the network settings of the Pollux are correct.**

Make sure the Time Settings are correct, before using the time schedule function.

The **Latitude** and **Longitude** are in Decimal Degrees and are important to determine the sunrise and sunset of each day.

Current time (UTC)	28-02-23 11:40 
Day of the week	Tuesday 
Lat	<input type="text" value="51.41"/>
Long	<input type="text" value="5.46"/>
Todays sunrise (UTC)	06:26
Todays sunset (UTC)	17:15

Press 'Add timeslot' to create a timeslot that can be used for action handlers. A set of preconditions will need to be configured.



When the timeslot is created, it will appear in the Time Schedule tab:

Value	Action handlers
Every day from sunset until sunrise	<div>Set-up new handler</div> <div>Delete</div>

To add an action Handler press 'Set-up new handler'. Select the action that you want to activate when the time conditions are met.

## Setup action handler

### Select action

- ☐ Toggle output
- ☐ Turn on output
- ☐ Turn off output
- ☐ Redundant output
- ☐ Activate Scene
- ☐ Deactivate Scene
- ☐ Switch on digital output
- ☐ Switch off digital output

Previous

Next


Cancel

Finish




## A few examples of Time Schedules


Activate outputs daily, from sunset to sunrise:

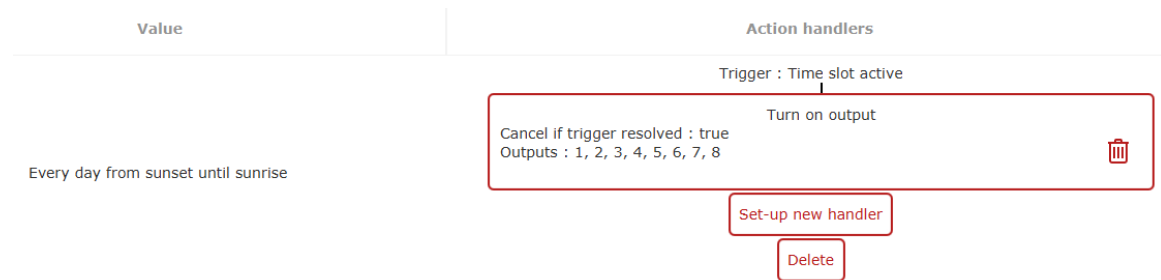

Activate outputs on specific weekdays, Friday and Saturdays from 18:00 to 23:30:

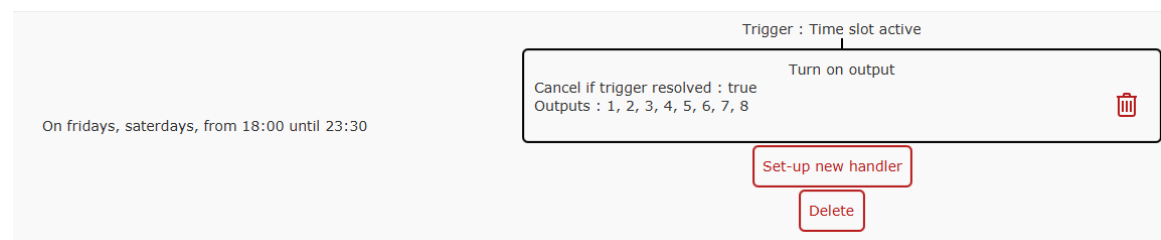

Activate outputs on a specific day, 25-12-23 from sunset to 23:45:

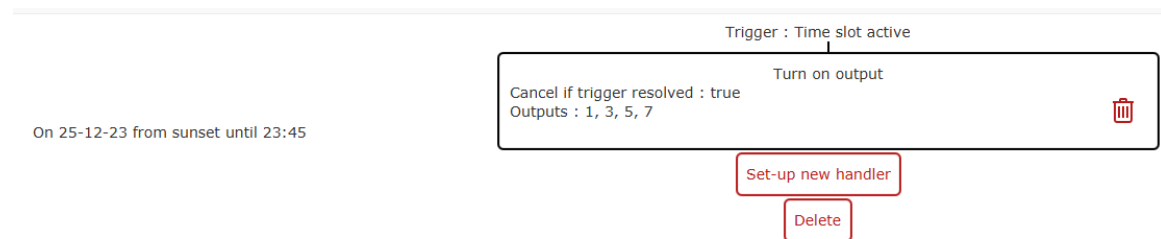

For more information see: [MaNima Tutorial - Time Schedules - YouTube](#)



## The MaNima Configurator – Action handler

Action handlers are used to set actions to measured values such as high current, digital inputs, temperature etc..

To set-up an action handler, press this button:

**Set-up new handler**

Depending on which tab you are present when pressing this button, a menu will show up with multiple options.

The first tab will be a 'select trigger'. Here you can set the conditions for an action handler.

The second tab is the 'select action'. Here you can set the action after the condition has been activated.

The last tab is the 'action parameter'. Here you can set the parameters of the solution.



## Setup Action:

### I / O

**Digital input high:** Digital input is turned on

**Digital input low:** Digital input is turned off

**Digital input changed:** Digital input is has changed.

#### Setup action handler

Select trigger

- ☐ Digital input high
- ☐ Digital input low
- ☐ Digital input changed

Previous

Next

Cancel

Finish

### Current

**Peak current too high:** the value given to parameter 'Port (...) Peak current high setpoint' is the value for this Action.

**Peak current too low:** the value given to parameter 'Port (...) Peak current low setpoint' is the value for this Action.

#### Setup action handler

Select trigger

- ☐ Peak current too high
- ☐ Peak current too low

Previous

Next

Cancel

Finish

### Current

**Average current too high:** Maximum average current.

**Average current too low:** Minimum average current.

#### Setup action handler

Select trigger

- ☐ Average current too high
- ☐ Average current too low

Previous

Next

Cancel

Finish

### Current

**Output shortcircuit:** Select this to enable safety precautions for shortcircuits.

#### Setup action handler

Select trigger

- ☐ Output shortcircuit

Previous

Next

Cancel

Finish

### NTC / LDR

**NTC temperature too high:** Use NTC(...)Inmax as a maximum value until this action is activated.

**NTC disconnected:** Use this to set an action when the NTC has been disconnected.

**NTC shortcircuit:** Use this to set an action when the NTC has been short circuited

#### Setup action handler

Select trigger

- ☐ NTC temperature too high
- ☐ NTC disconnected
- ☐ NTC shortcircuit

Previous

Next

Cancel

Finish



## Setup action handler:

**Toggle output:** Turn an output on or off with the same action.

**Turn on output:** This enables the output

**Turn off output:** This disables the output

**Redundant output:** Enable the 2<sup>nd</sup> power output on the MaNima Pollux for redundancy

**Activate Scene:** Activate a scene with

**Deactivate Scene:**

**Switch on digital output:** This turns on a digital output.

**Switch off digital output:** This turns off a digital output.

### Setup action handler

Select action

- ☐ Toggle output
- ☐ Turn on output
- ☐ Turn off output
- ☐ Redundant output
- ☐ Activate Scene
- ☐ Deactivate Scene
- ☐ Switch on digital output
- ☐ Switch off digital output

Previous
Next
Cancel
Finish

## Solution parameters

**Delay (ms):** Delay in ms before the solution is enabled.

**Cancel the solution after the failure is resolved:** Cancel the solution after the failure is resolved.

**Output number:** set the PWM output number here, for example: 4 for PWM port 4.

### Setup action handler

### Set action parameters

Delay (ms)

Delay before this action is performed

Cancel if trigger resolved ☒

Cancel this action after the trigger is resolved

Previous
Next
Cancel
Finish

For more information see: [MaNima Tutorial - Current and Failure handlers - YouTube](#)




# The MaNima Configurator – Action Handler Examples

In this chapter there will be multiple examples of action Handlers for various cases.

## Redundant setup:

In this example we are building a redundant setup for 2 LEDs. Using output 1 and 3 it is possible to create a redundant setup where if the primary output (1) can be replaced by the secondary output (3).

### Output 1, step 1

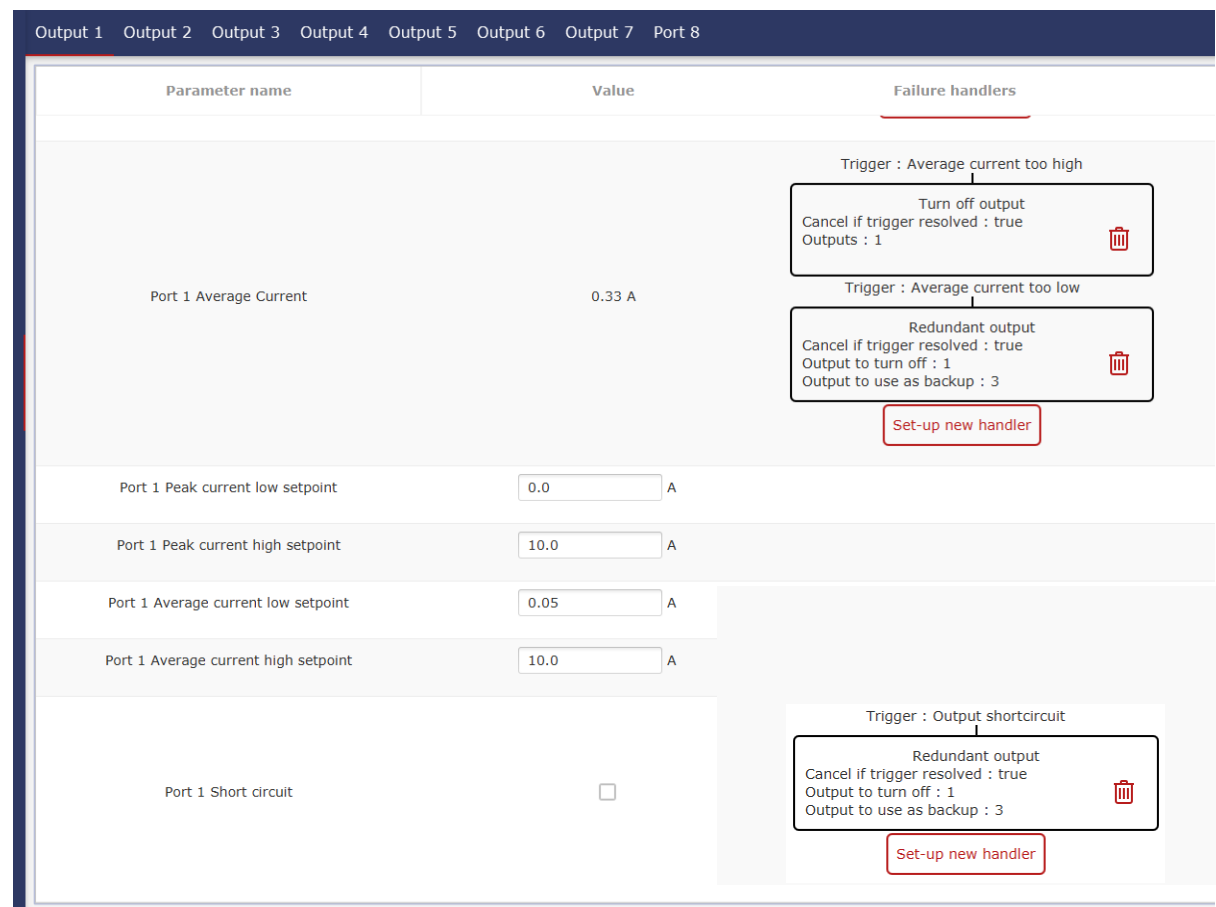

Parameter name	Value	Failure handlers
Port 1 Average Current	0.33 A	<p>Trigger : Average current too high</p> <div>           Turn off output            Cancel if trigger resolved : true            Outputs : 1         </div> <p>Trigger : Average current too low</p> <div>           Redundant output            Cancel if trigger resolved : true            Output to turn off : 1            Output to use as backup : 3         </div> <p>Set-up new handler</p>
Port 1 Peak current low setpoint	0.0 A	
Port 1 Peak current high setpoint	10.0 A	
Port 1 Average current low setpoint	0.05 A	
Port 1 Average current high setpoint	10.0 A	
Port 1 Short circuit	<input type="checkbox"/>	<p>Trigger : Output shortcircuit</p> <div>           Redundant output            Cancel if trigger resolved : true            Output to turn off : 1            Output to use as backup : 3         </div> <p>Set-up new handler</p>

The action handlers have been set. When the MaNima Pollux measures a shortcircuit it will disable the output (1) and activate the secondary output (3).

When an average current above 10A is measured it will disable the output (1) and switch over to the secondary output (3)

## Output 1, step 2

By creating a shortcircuit on CH1 and V+1, the action handler will detect an 'output shortcircuit'. The MaNima Pollux will now disable the primary output (1) (Current = 0.01A) and activate the secondary output (3). The 'Port 1 short circuit' checkbox will also be red if a short circuit has been detected.

The action handlers will turn red when they are activated.

Parameter name	Value	Action handlers
Port 1 Average Current	0.01 A	<div> <div>Trigger : Average current too high</div> <div> <div>Turn off output</div> <div>Cancel if trigger resolved : true</div> <div>Output number : 1</div> </div> </div> <div> <div>Trigger : Average current too low</div> <div> <div>Redundant output</div> <div>Cancel if trigger resolved : true</div> <div>Output to turn off : 1</div> <div>Output to use as backup : 3</div> </div> </div> <div>Set-up new handler</div>
Port 1 Peak current low setpoint	0.0 A	
Port 1 Peak current high setpoint	10.0 A	
Port 1 Average current low setpoint	0.05 A	
Port 1 Average current high setpoint	10.0 A	
Port 1 Short circuit	<input checked="" type="checkbox"/>	<div> <div>Trigger : Output shortcircuit</div> <div> <div>Redundant output</div> <div>Cancel if trigger resolved : true</div> <div>Output to turn off : 1</div> <div>Output to use as backup : 3</div> </div> </div> <div>Set-up new handler</div>





## Output 3, step 2

When the action handlers of Output 1 have been activated, output 3 has been activated.

This can be seen by the increased average current of the output, which has increased by 0.36A

For increased safety, this output has action handlers for high currents and short circuits. When these are activated, the Output will be turned off.

Parameter name	Value	Action handlers
Port 3 Peak Current	0.36 A	<a href="#">Set-up new handler</a>
Port 3 Average Current	0.36 A	<div> <div>Trigger : Average current too high</div> <div> <div>Turn off output</div> <div>Cancel if trigger resolved : true</div> <div>Output number : 3</div> <div></div> </div> <div><a href="#">Set-up new handler</a></div> </div>
Port 3 Peak current low setpoint	<input type="text" value="0.0"/> A	
Port 3 Peak current high setpoint	<input type="text" value="10.0"/> A	
Port 3 Average current low setpoint	<input type="text" value="0.0"/> A	
Port 3 Average current high setpoint	<input type="text" value="10.0"/> A	
Port 3 Short circuit	<input type="checkbox"/>	<div> <div>Trigger : Output shortcircuit</div> <div> <div>Turn off output</div> <div>Cancel if trigger resolved : true</div> <div>Output number : 3</div> <div></div> </div> <div><a href="#">Set-up new handler</a></div> </div>

For more information see: [MaNima Tutorial - Current and Failure handlers - YouTube](#)



## The MaNima Configurator - Update

Because MaNima Technologies B.V. is constantly improving their products, there is an update tab available which allows the user to update the software version of the Interface without needing access to the physical Interface. This is only possible if there is an ethernet connection to the Interface.

### Step by step:

1. Download the latest (or required) update from the MaNima website: [Downloads | MaNima Technologies \(manima-technologies.com\)](https://www.manima-technologies.com/support/downloads/)
2. Select the downloaded file by pressing the 'Select file' button.
3. Make sure the correct file is selected, then press 'Start update'.

To update the firmware of the interface, please download the latest firmware from our website:  
<https://www.manima-technologies.com/support/downloads/>

Current firmware version: V 1.3.0  
 Licence: Pollux H7

Update

To update a group of MaNima Interfaces, press 'batch update' and select which Interfaces you want to update.

When encountering problems during your use of the MaNima Interface, make sure the latest update of the software is downloaded on the MaNima Interface. Also make sure the latest version of the MaNima Configurator is installed.

Make sure that the downloaded update file has the correct license. A Magnus 2 update file is not compatible with a Magnus 8 update file.

For more information see: [MaNima Tutorial - Updating with Ethernet - YouTube](#)



## Installation & Wiring


*In this chapter there will be a description about every available port on the MaNima Pollux.*

For additional wiring diagrams, visit the MaNima Technologies website → support and download the wiring diagrams. Link: [Downloads | MaNima Technologies \(manima-technologies.com\)](#).



## Installation & Wiring - Port Descriptions

Descriptions of ports from top left to bottom right:

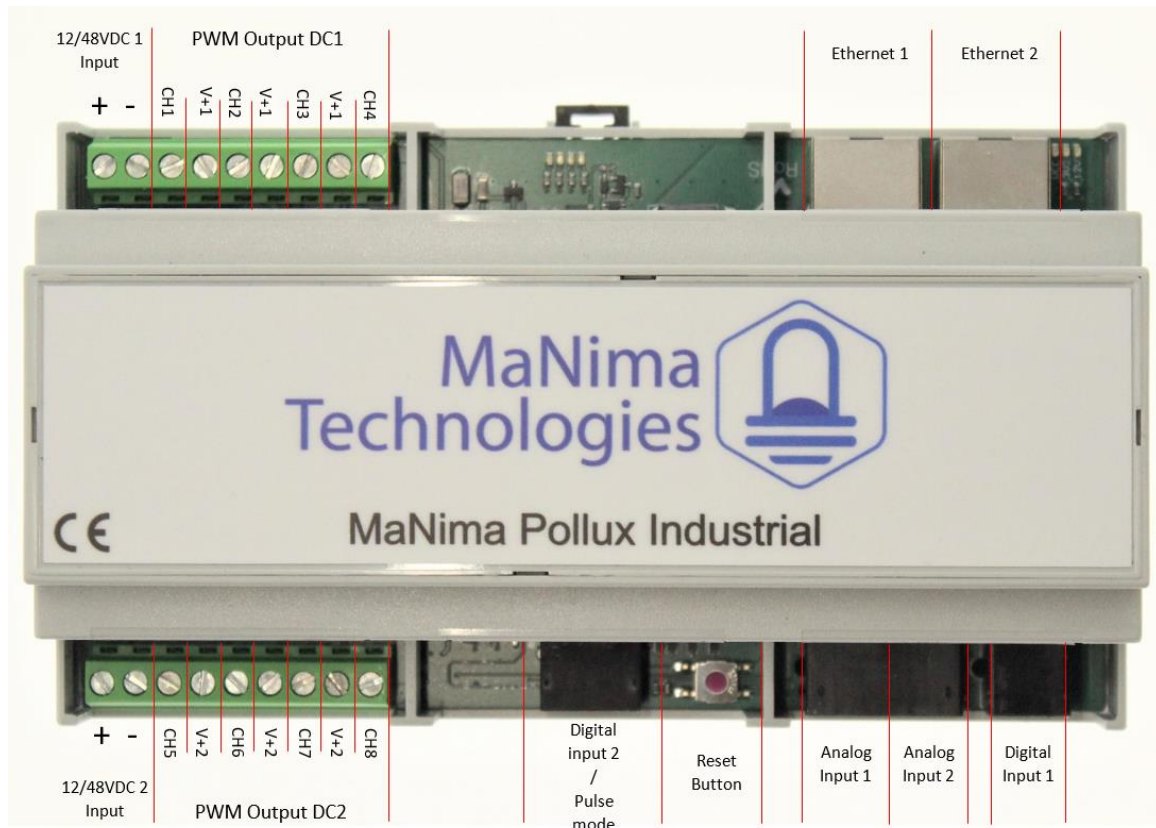

**12/48V DC1:** Power input for power source 1. Corresponds with 'DC1 PWM Outputs'.

**12/48V DC2:** Power input for power source 2. Corresponds with 'DC2 PWM Outputs'.

**DC1 PWM Outputs:** 4 x PWM Outputs and 3 x V+. Corresponds with '12/48V DC1' Power input.

**DC2 PWM Outputs:** 4 x PWM Outputs and 3 x V+. Corresponds with '12/48V DC2' Power input.

**Analog input 1:** Input for analog sensors. See next page for the pinout.

**Analog input 2:** Input for analog sensors. See next page for the pinout.

**Digital input 1:** In-and outputs for the digital sensors. See next page for the pinout.

**Ethernet 1 and 2:** RJ45 connector Ethernet switch for connecting the Pollux to the network.


**Digital input 2 / Pulse mode (Industrial license only):** Digital input RJ45 connector.

## Installation & Wiring – Redundant Power Supply

There are 2 different power inputs on the MaNima Pollux. These are designated as '12/48VDC 1 Input' and '12/48VDC 2 Input'. The MaNima Pollux can operate its monitoring capability when one of the two inputs is supplied with 12/48VDC. Only half of the PWM outputs can be used if there is only one power input used.

With the use of action handlers it is possible to create redundant setups where the MaNima Pollux can automatically switch between power supplies when failures are detected (such as short circuits, over currents etc..)

Each side can support up to 20A. It is recommended to use 2 power supplies, one for each input.

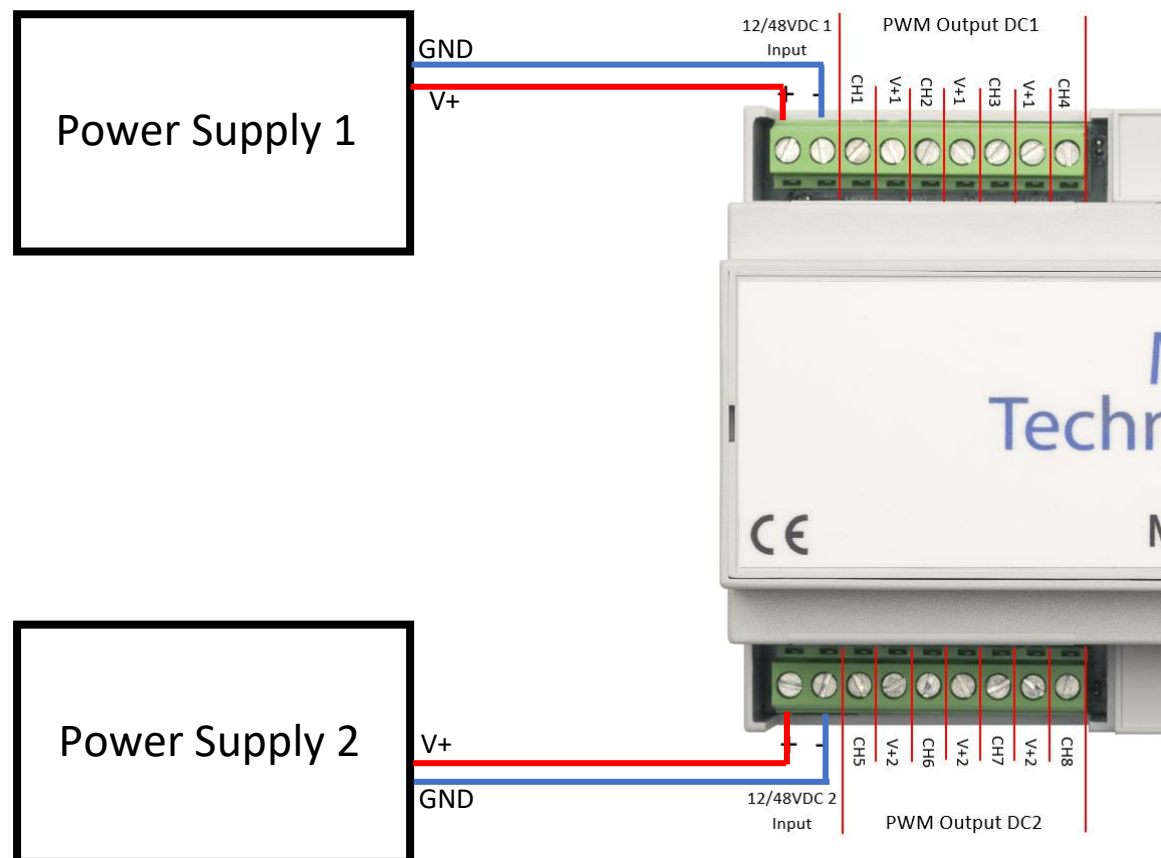

# Installation & Wiring – Digital and Analog In/outputs

There are 3 6P6C connectors available on the MaNima Pollux. The left 2 are used for the Analog Sensor Inputs, and the right one is used for the Digital In-and outputs.

## Analog 1

Pin	Function	Max Current	Max Voltage
1	GND	50mA	0,1V
2	GND	50mA	0,1V
3	NTC / LDR 1_1	50mA	3,3V
4	NTC / LDR 2_1	50mA	3,3V
5	NTC / LDR 3_1	50mA	3,3V
6	NTC / LDR 4_1	50mA	3,3V

## Analog 2


Pin	Function	Max Current	Max Voltage
1	GND	50mA	0,1V
2	GND	50mA	0,1V
3	NTC / LDR 5_1	50mA	3,3V
4	NTC / LDR 6_1	50mA	3,3V
5	NTC / LDR 7_1	50mA	3,3V
6	NTC / LDR 8_1	50mA	3,3V

## Digital 1


Pin	Function	Max Current	Max Voltage
1	GND	50mA	0,1V
2	GND	50mA	0,1V
3	Digital Out 2_1	50mA	300V
4	Digital Out 2_2	50mA	300V
5	Digital In 1	5mA	48V
6	Digital in 2	5mA	48V

## Digital 2



Pin	Function	Max Current	Max Voltage
1	Digital in 2.1	5mA	48V
2	Digital in 2.2	5mA	48V
3	Digital in 2.3	5mA	48V
4	Digital in 2.4	5mA	48V
5	Digital in 2.5	5mA	48V
6	Digital in 2.6	5mA	48V
7	Digital in 2.7	5mA	48V
8	Digital in 2.8	5mA	48V

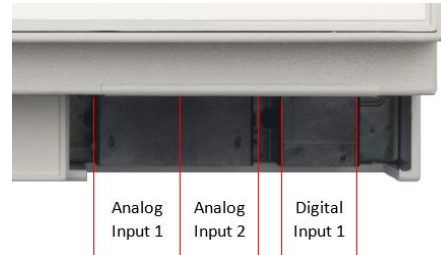

6P6C Pinout:

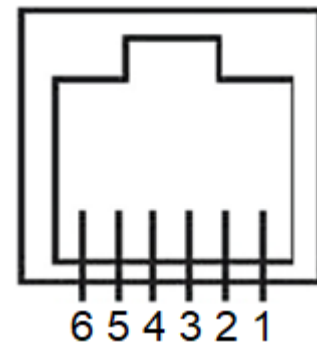

RJ45 Pinout:

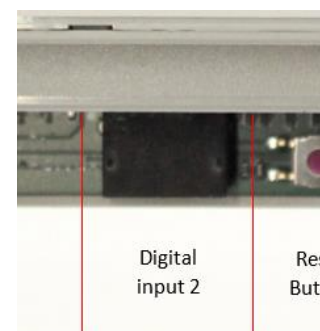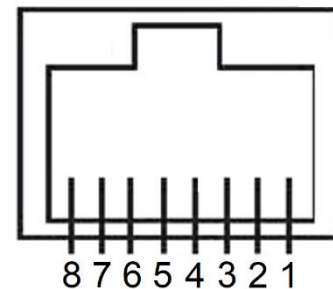

## Installation & Wiring – PWM Outputs

PWM-Outputs are used to power analogue LEDs.

CH1 to CH8 are PWM controlled GND's.

V+1 and V+2 are used as a positive voltage and corresponds to input 1 and 2 respectively.

The PWM frequency of the PWM outputs can all be individually adjusted in the LED output tab in the MaNima Configurator

The corresponding universes and channels can be configured for each PWM output in the Led output tab.



## Installation & Wiring – Reset & Indications

The MaNima Pollux has multiple LED indications present on its circuit board. It also has a single reset button that can be used to manually reset the Pollux when this is not possible with the MaNima Configurator.






## Recording and Playing

The MaNima Pollux can't record scenes by itself, this feature requires a MaNima Magnus. By pairing the MaNima Pollux with the MaNima Magnus, it is possible to record the MaNima Pollux and play the scene back later.



## Action Handler procedure

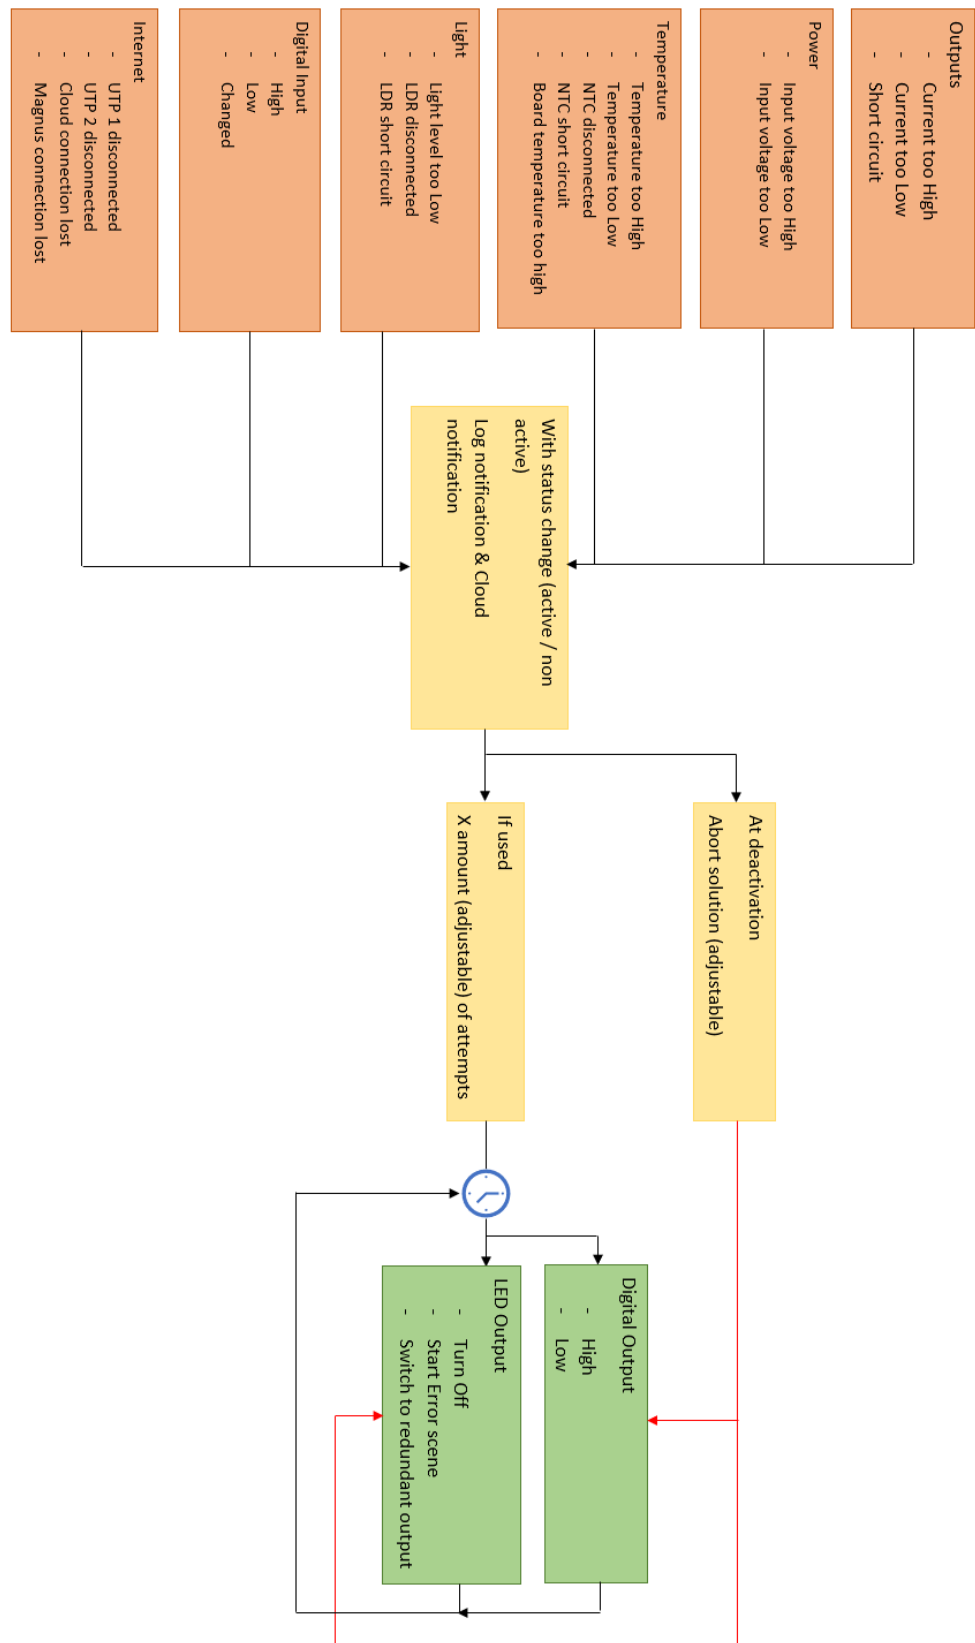

## On-Board Temperatures

The MaNima Pollux has a advised maximum board temperature of 60°C. The On-Board temperature is measured in real time and can be seen in the MaNima Configurator in the NTC / LDR tab.

NTC / LDR				Currently editing: Pollux			
NTC / LDR 1 NTC / LDR 2 NTC / LDR 3 NTC / LDR 4 NTC / LDR 5 NTC / LDR 6 NTC / LDR 7 NTC / LDR 8 Board							
Parameter name	Value	Remarks	Failure h				
Board temperature	27.5 deg C						

When using the MaNima Pollux in an ambient temperature of 40°C without active cooling do not exceed the maximum currents as seen in the 'Technical Specifications' table.


It is possible to exceed the maximum currents, but it is most important to keep a maximum board temperature of under 60°C. This can be done by actively/passively cooling the MaNima Pollux.



## Overview

### MaNima Pollux

#### Overview

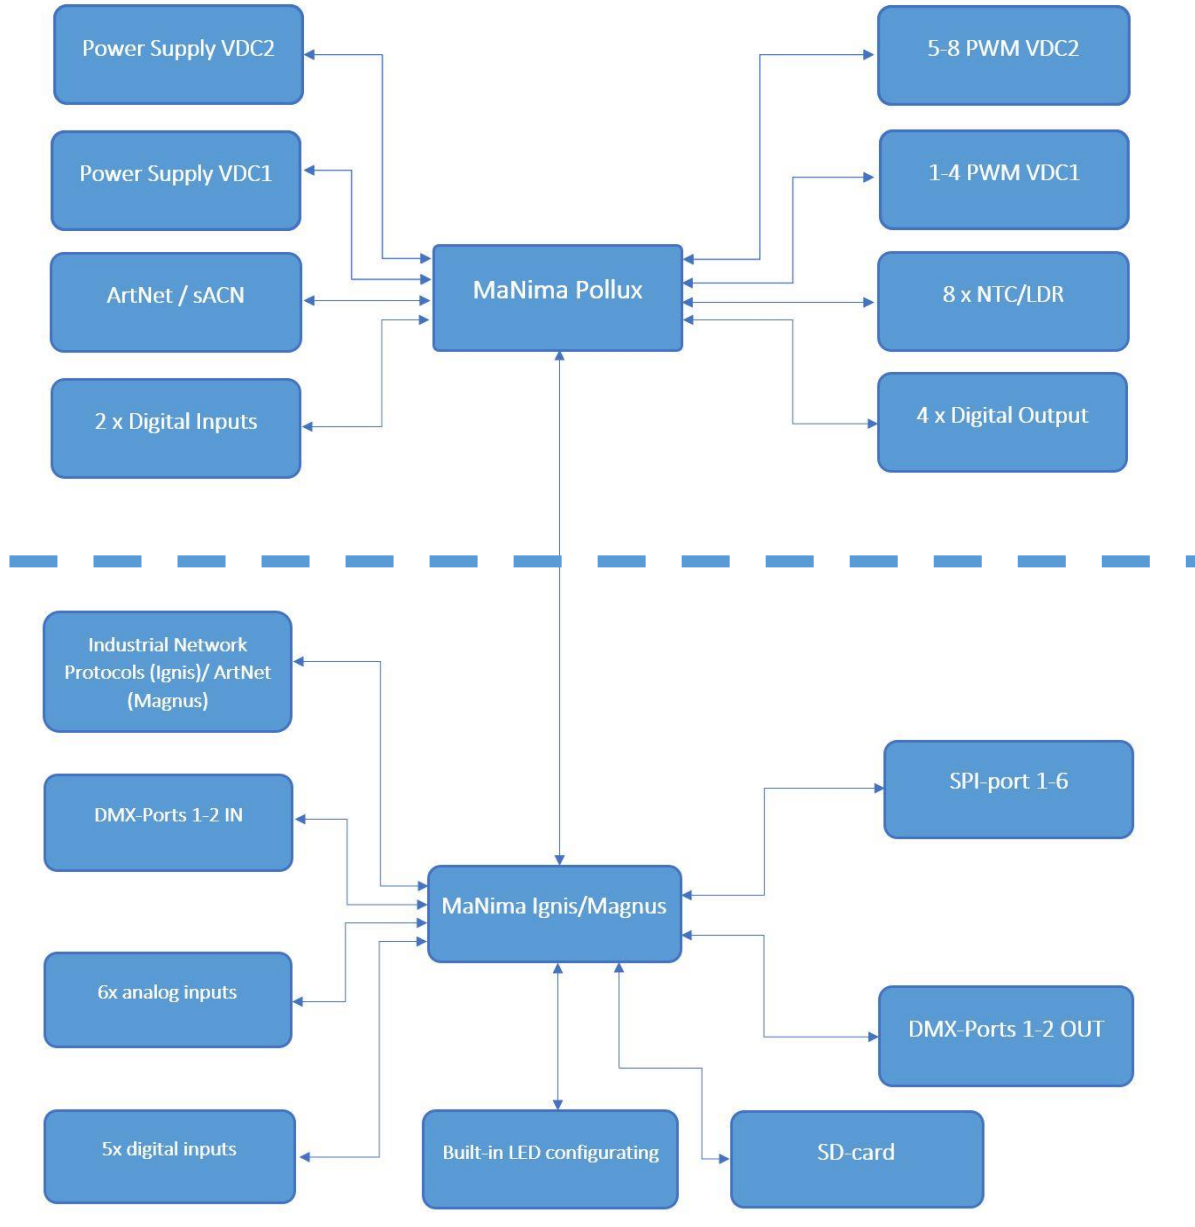

## YouTube Tutorials

### YouTube Tutorial links:

[MaNima Tutorial - Connecting the Interface - YouTube](#)

[MaNima Tutorial - Mapping and Recording digital LEDs - YouTube](#)

[MaNima Tutorial - Synchronized recording and playing - YouTube](#)

[MaNima Tutorial - DMX Functions - YouTube](#)

[MaNima Tutorial - Digital Triggers - YouTube](#)

[MaNima Tutorial - Analog Triggers - YouTube](#)

[MaNima Tutorial - Loop Functions - YouTube](#)

[MaNima Tutorial - Updating with Ethernet - YouTube](#)

[MaNima Tutorial - Using Segments - YouTube](#)

[MaNima Tutorial - Connecting the MaNima Pollux - YouTube](#)

[MaNima Tutorial - Configuring NTC inputs - YouTube](#)

[MaNima Tutorial - Current and Failure handlers - YouTube](#)

[MaNima Tutorial - Inputs and Outputs - YouTube](#)

[MaNima Tutorial - Installing the MaNima HMI Touchscreen - YouTube](#)

[MaNima Tutorial - Time Schedules - YouTube](#)



## Contact Info

### **MaNima Technologies B.V.**

#### **Address:**

Hastelweg 260-B  
5652 CN, Eindhoven  
Netherland

#### **Contact:**

E: [info@manima-technologies.com](mailto:info@manima-technologies.com)  
W: [www.manima-technologies.com](http://www.manima-technologies.com)  
T: 040 202 49 04

Dutch chamber of Commerce registration number/KvK-nummer: 71614605

#### **YouTube**

Link: [MaNima Technologies - YouTube](#)

